


## Door Side Sensor

### ■ Features

- Long sensing distance: 0 to 10m
- High ambient intensity of illumination:  
Max. 100,000lx of sunlight
- Easy to connect sensor head to controller
- Easy sensitivity setting  
(automatic sensitivity setting by one push method)
- Self-diagnosis function
- Compact Size (W77×L44×H30mm)

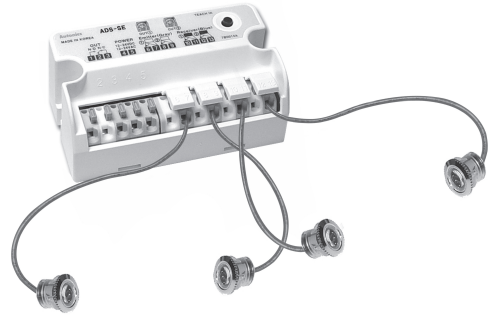

**⚠ Please read "Caution for your safety" in operation manual before using.**

### ■ Specifications

Model	<b>ADS-SE</b>	
Sensing type	Through-beam type	
Sensing distance	0 to 10m	
Power supply	12-24VAC ±10% 50/60Hz / 12-24VDC ±10% (ripple P-P: max. 10%)	
Power/Current consumption	AC: Max. 2VA / DC: Max. 50mA	
Contact output	Contact composition	1c
	Contact capacity*1	50VDC 0.3A (resistive load)
	Relay life cycle	Mechanical- Min. 5,000,000 operations, Electrical- Min. 100,000 operations
Response time	Approx. 50ms (from light OFF)	
Output holding time	Approx. 500ms (from light ON)	
Available sensor set	2set	
Indicator	Operation indicator: Red LED, Green LED(Refer to C-14 to 15 for the display status in operation)	
Light source	Infrared LED (850nm modulated)	
Environment	Ambient illumination	Sunlight: Max. 100,000lx (receiver illumination)
	Ambient temperature	-20 to 55°C, storage: -25 to 60°C
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH
Protection structure	IP30 (IEC standard)	
Sensor cable length	10m	
Sensor cable	Ø2.4mm, 1-wire, 5m (AWG26, core diameter: 0.16mm, number of cores: 7, insulator out diameter: Ø1.32mm)	
Material	Sensor - Holder: Acrylonitrile butadiene styrene, Lens: Polymethyl methacrylate, Lens guide: Polycarbonate, Nut: Cu-Zn Controller - Housing: Acrylonitrile butadiene styrene, Cover: Acrylonitrile butadiene styrene, LED CAP: Polymethyl methacrylate, Bolt: Steel chromium molybdenum (brass, Ni-plate)	
Accessory	Sensor: 1 set (ADS-SH), Fixing bolt for controller: 2 pieces	
Unit weight	Approx. 300g	

※1: **Do not use Load which is beyond the rated capacity of contact point of Relay.**  
It can cause bad insulation, contact fusion, bad contact, relay breakdown, and fire etc.

※Please purchase 1 set of sensor separately when mounting 2 sets of sensor.

※The mounting bracket of sensor (ADS-SB12, ADS-SB10) is sold separately.


※It is enable to purchase a controller separately.

※The temperature or humidity mentioned in Environment indicates a non freezing or condensation environment.

# Door Side Sensor


## Unit Description

### • Controller (ADS-SEC)

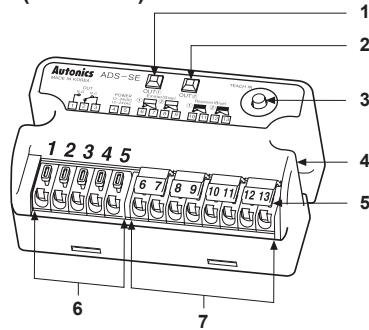

1. Display LED (red)
2. Display LED (green)
3. Sensitivity setting button
4. Mounting hole
5. Wiring connection button
6. Terminal for power and output (1 to 5)
7. Terminal for emitter/receiver of sensor (6 to 13)

### • Sensor (ADS-SH)


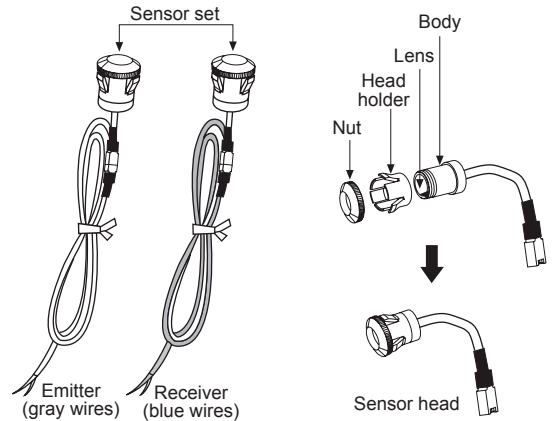


※It is able to use 2 sets of the sensor with this product.  
If it is necessary, purchase a set more for using.

## Dimensions

(unit: mm)


### • Controller (ADS-SEC)

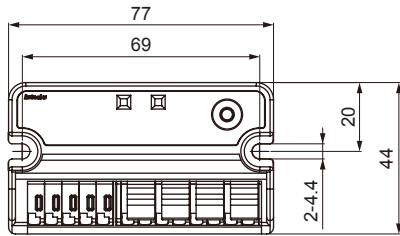


※It is able to purchase a controller (ADS-SEC) separately.

### • Sensors (ADS-SH)

#### • One push type

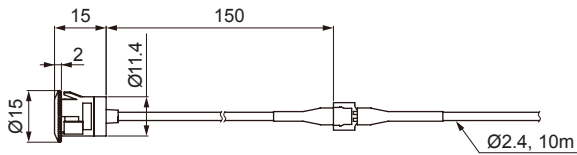


#### • Screw type

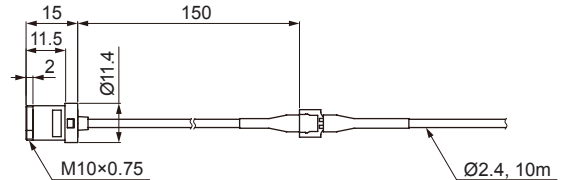


### • Mounting bracket (sold separately)

#### • One push type (ADS-SB12)

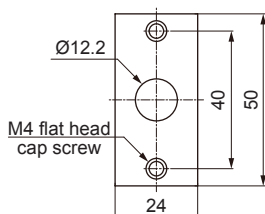

#### • Screw type (ADS-SB12)

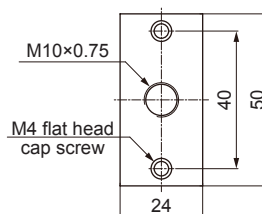


(A)	Photoelectric Sensors
(B)	Fiber Optic Sensors
(C)	Door/Area Sensors
(D)	Proximity Sensors
(E)	Pressure Sensors
(F)	Rotary Encoders
(G)	Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets
(H)	Temperature Controllers
(I)	SSRs / Power Controllers
(J)	Counters
(K)	Timers
(L)	Panel Meters
(M)	Tacho / Speed / Pulse Meters
(N)	Display Units
(O)	Sensor Controllers
(P)	Switching Mode Power Supplies
(Q)	Stepper Motors & Drivers & Controllers
(R)	Graphic/ Logic Panels
(S)	Field Network Devices
(T)	Software

## ■ Installation

### ◎ Caution for sensor installation

1. Sensing distance is 10m.  
Install it in the rated distance.
2. Install the sensor with more than 50cm gap from the bottom and ceiling.  
It may cause malfunction by reflected beams from the surface of the bottom and ceiling.
3. Do not put obstacles between the emitter and the receiver.  
It may cause malfunction.
4. This product is for indoor. Avoid the place where exposed in direct sunlight or is in over rated intensity of illumination.

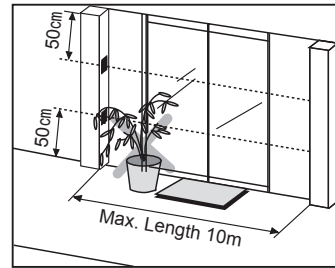


### 1. Make a hole on the side post of auto door as follows.

- **When not using the mounting bracket**
  - Mounting hole of sensor head:  $\varnothing 12.2^{+0.1}$ mm
  - Panel thickness of sensor head:  $1.5^{+0.1}$ mm
- **When using the mounting bracket**
  - Through hole of sensor head:  $\varnothing 13$  to  $\varnothing 14$ mm
  - Screw hole for fixing the bracket: M4 Tap or  $\varnothing 3.5$ mm


### 2. Mount the sensor head in the mounting hole

- **When not using the mounting bracket**
  - One push method  
Insert the sensor head into the mounting hole like the right picture.
- **When using the mounting bracket**
  - One push method
    - 1) Install the sensor head at the bracket first.
    - 2) Fix the bracket by screws on the place for installing.

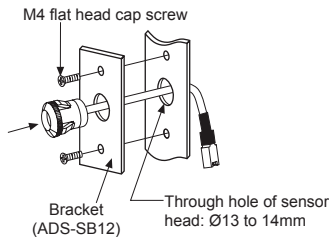

### • Screw method

- 1) Remove nuts and the head holder from the sensor head.
- 2) Install the sensor head on the bracket.
- 3) Fix the bracket on the side post of the door by screws.

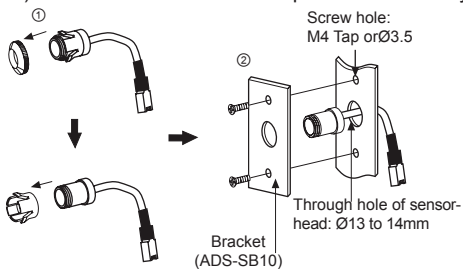

※ The mounting bracket is sold separately.  
If necessary, please purchase it for using.

### ⚠ Caution For mounting hole

- Check the mounting holes for the head of the emitter and the receiver are in parallel for the optical axes.
- Grind around the mounting holes drilled smoothly.  
It may hurt a person by the sharp part and cause malfunction by sensor head inclined.

### ⚠ Caution When installing in One push method

- Check the nuts are fixed on the sensor body tightly.
- Install that there is no gap between the nuts and the side of the door (or bracket). It may cause malfunction because sensitivity setting is not available as the optical axes are not matched if sensor body is inclined.

### ⚠ Caution After installing the sensor head

- Check the damage such as scratches or pollutant on the lens of the sensor head.  
It may cause malfunction in the condition of shading light or lack of sensitivity by dust.

### ⚠ Caution For maintenance and mending

- Keep the sensor head clean.  
It may not operate normally.  
Clean it by a piece of cloth with a neutral detergent.  
Do not use organic solvent.  
It may cause damage to lens of the head by organic solvent.
- Do not wash the head part of the sensor.  
Sensor by water, it may cause product damage.

## ■ Installation

### ◎ Controller installation

- Fix controller with the bolts (M4×20, 2pcs). Process the fixing hole of controller by M4 included in the package. Refer to dimension for installation.


### ⚠ Warning When fixing controller

- Do not screw the bolts too tightly. The fixing hole of controller may be broken.


### ◎ Wiring connection

#### 1. Follow as below when adjusting wiring length.


- 1) Cut off the wiring length as much as user needs.
- 2) Connect the wire to the terminal after taking off the wire covering. It is easy to connect if soldering the end of the wires.

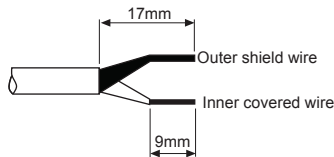


#### 2. Match wires in the number of terminals and connect them.

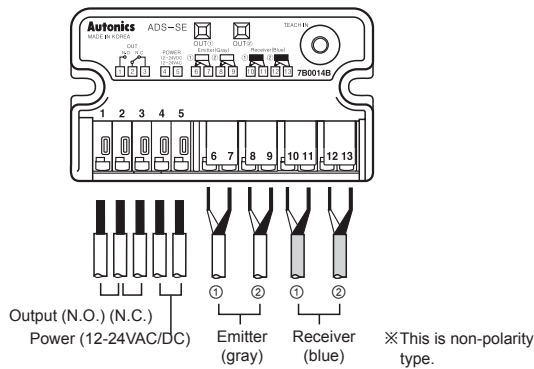

- Connection method for sensor
- Put outer shield and inner covered wires at once, pressing the insert button, then take off from the button.

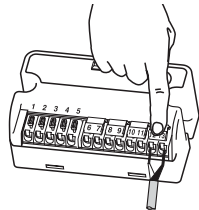

- Connection method for power and output wires
- Put the wires pressing the terminal ends by a driver etc.

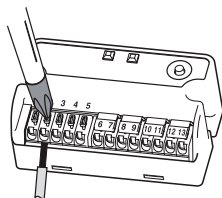

- Allowable diameter of power and output wires
  - Single wire:  $\varnothing 0.12$  to  $1.6\text{mm}^2$  (AWG26 to 16)
  - Stranded wire:  $\varnothing 0.13$  to  $1.5\text{mm}^2$  (AWG26 to 16)

### ⚠ Warning It may cause electric shock.

- Be sure of connecting wires in power off.

### ⚠ Caution It may cause damage to this product.

- Follow the left picture when cutting off the wires of sensor head. If the cover of wire is taken off too much, it may cause damage to this product as the end of both wires is shorted.

### ⚠ Caution Do not extend the wire of sensor head.

- Do not connect extended wire to the wire of sensor head. It may cause malfunction by noise.

### ⚠ Caution It may cause damage to this product.

- Do not connect two wires or more to a terminal.

### ⚠ Caution Wiring connection

- It does not operate normally if the wiring is connected conversely.

### ⚠ Caution It may cause damage to this product.

- Make sure of connecting power wire to the terminal 4, and 5. Otherwise, It may cause damage to this product.

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

## ■ Proper Usage

### ◎ Sensitivity setting

Set sensitivity after mount this product for a normal operation. It sets the optimum sensitivity automatically at the controller according to installed environment.


Order	LED display	Status
Press sensitivity setting button	Red/Green Flashed by turns	Ready
↓	↓	↓
After more than 1sec	Red/Green All LED OFF	The beginning of sensitivity setting
↓	↓	↓
Take off from button	Flashed at once	↓
	Displaying operation status	The end of sensitivity setting

Check LED display after setting the sensitivity.

※When sensitivity setting button is pressed less than 1sec sensitivity setting is cancelled, then it operates by previous setting.

### ⚠ Caution For mounting hole

- Check the wiring again with the connection diagram.
- When set the sensitivity, the transmitted beam must not be shaken and cut off.
- Do not put obstacles like a pot on the passage of the through beam.
- It may cause malfunction in above cases from lack of sensitivity or abnormal sensitivity setting.

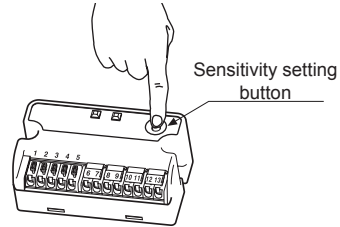

### ◎ Sensitivity status and check after setting sensitivity

☼: light ON, ◐: flash, ●: light OFF

Connecting sensor	LED display		Status	
	Red	Green	After setting sensitivity	In operation
1set	☼	●	Sensitivity setting success	Received light
	◐	◐	Sensitivity setting failure	Emitter disconnection or sensor cable extension
	◐	●	—	Lack of sensitivity
	●	●	—	Interrupted light
2set	☼	☼	1, 2-channel sensitivity setting success	1, 2-channel received light
	☼	◐	1-channel sensitivity setting success, 2-channel sensitivity setting failure	2-channel lack of sensitivity
	☼	●	—	1-channel received light, 2-channel interrupted light
	◐	☼	1-channel sensitivity setting failure, 2-channel sensitivity setting success	1-channel lack of sensitivity
	●	☼	—	1-channel interrupted light, 2-channel received light
	◐	◐	1, 2-channel sensitivity setting failure	1, 2-channel lack of sensitivity or emitter disconnection
	●	●	—	1, 2-channel interrupted light

- After complete sensitivity setting for using one set of sensor, red LED is flashing, green LED is off and only red LED displays the operation status.

※After complete sensitivity setting in using two sets of sensors, red LED indicates the operation status of receiver set by receiver ① and green LED indicates the operation status of receiver set by receiver ②.

※Self-diagnosis function: If lack of sensitivity occurs by optical axes not matched and pollution by dust on the lens of emitter/receiver etc., the LED of normal operation channel flashes due to unstable operation.

- Check process for sensitivity setting failure

1. Check obstacles between the heads of emitter receiver.
2. Check pollutant on the lens of emitter receiver.
3. Check wires cut off and the connection with the connection diagram on the controller.
4. Check if the head of emitter/receiver is inclined or not.
5. Set sensitivity again after removing above problem.




※When sensitivity setting is failure even though above problem is solved, please contact us.

# Door Side Sensor

## ■ Operation Check

Please check the operation flow chart below.

☀: light ON, ●: light OFF

Operation					
Status	Power OFF	<ul style="list-style-type: none"> <li>• Normal operation</li> <li>• No human or any material between sensors</li> </ul>	Human or material is passing between sensors (When cutting off the transmitted beam)	After human or material is passed	
LED display	●	☀ (red/green)	●	☀ (red/green)	
Relay output	N.O.	OPEN	OPEN	CLOSE	OPEN
	N.C.	CLOSE	CLOSE	OPEN	CLOSE

## ■ Troubleshooting

Malfunction	Cause	Troubleshooting
It does not work.	Power voltage	Check the power cable and adjust power voltage.
	Cable disconnection, incorrect connection	Please check wiring and terminal.
	Rated sensing distance	Use it in rated sensing distance.
Sometimes it does not work.	Pollution by pollutant on the lens of Emitter Receiver.	Remove the pollutant.
It is operated even if people does not enter in sensing area.	Rated sensing distance	Use it in rated sensing distance.
	There are obstacles between Emitter and Receiver.	Remove obstacles.
	There is equipment generating strong noise or ratio wave (Motor, Generator, High-tension wire).	Keep away from the equipment generating strong noise or ratio wave.

## ■ Cautions during Use

- Follow instructions in 'Cautions during Use'.  
Otherwise, It may cause unexpected accidents.
- 12-24VDC, 12-24VAC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, 1 sec after supplying power.  
When using separate power supply for the sensor and load, supply power to sensor first.
- When using switching mode power supply to supply the power, ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.
- When connecting a DC relay or other inductive load, remove surge by using diodes or varistors.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive noise.
- This unit may be used in the following environments.
  - ①Indoors (in the environment condition rated in 'Specifications')
  - ②Altitude max. 2,000m
  - ③Pollution degree 3
  - ④Installation category II

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software